

Tank top return-line filter Pi 5000

Nominal size 40 up to 100 according to DIN 24550


1. Features

High performance filters for modern hydraulic system

- Provided for tank top installation
- Modular system
- Compact design
- Minimal pressure drop through optimal flow design
- Visual/electrical/electronic maintenance indicator
- Threaded connections

- Quality filters, easy to service
- Equipped with highly efficient glass fibre Sm-x filter elements
- Beta rated elements according to ISO 16889 multipass test
- Elements with high differential pressure stability and dirt holding capacity
- NPT- and SAE-connections on request
- Worldwide distribution



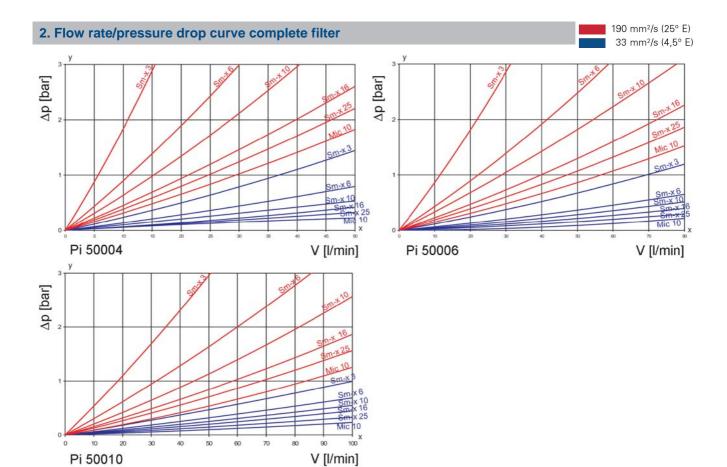

y = differential pressure Δ p [bar]

x = flow rate V [l/min]

3. Separation grade characteristics

y = beta-value

x = particle size [µm]

determined by multipass tests (ISO 16889) calibration according to ISO 11171 (NIST)

4. Filter performance data

tested according to ISO 16889 (multipass test)

Sm-x-elements with max. Δ p 10 bar


values guaranteed up to 10 bar differential pressure

5. Quality assurance

MAHLE filters and filter elements are produced according to the following international standards:

Norm	Designation
DIN ISO 2 941	Hydraulic fluid power filter elements; verification of collapse/burst resistance
DIN ISO 2 942	Hydraulic fluid power filter elements; verification of fabrication integrity
DIN ISO 2 943	Hydraulic fluid power filter elements; verification of material compatibility with fluids
DIN ISO 3 723	Hydraulic fluid power filter elements; method for end load test
DIN ISO 3 724	Hydraulic fluid power filter elements; verification of flow fatigue characteristics
ISO 3 968	Hydraulic fluid power-filters-evaluation of pressure drop versus flow characteristics
ISO 10 771.1	Fatigue pressure testing of metal containing envelopes in hydraulic fluid applications
ISO 16 889	Hydraulic fluid power filters-multi-passmethod for evaluation filtration performance of a filter element

6. Symbols

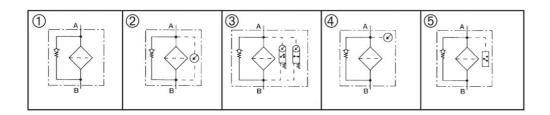

7. Order numbers

Example for ordering filters:

1. Filter housing	2. Filter element
Housing design = Bypass valve 3.5 bar	Type: Pi 25006 RN = Sm-x 25
Pressure switch normally closed (DSS)	
Type: Pi 50006-050 = NG 63	

7.1 Hou	ısing desig	ın* Pi 5000	4- Pi 50006-	Pi 50010-							
Nomi- nal size NG [l/ min]	Housing code	① with bypass valve 3.5 bar	② with visual indicator 2.2 bar	③ with electr. indicator 2.2 bar	④withpres-suregauge(DM)	with pressure switch normally closed (DSS)	with pressure switch normally open (DSO)	with breather MIC- element (BE- MIC)	with breather Sm-L- element (BE-SML)	with filling connec- tion (BA)	with anti spillage sleeve
	- 056										
	- 057										
	- 058										
	- 059										
	- 050										
	- 052										
	- 076										
	- 077										
	- 078										
50004	- 079										
50006	- 080										
50010	- 081 - 082										
	- 083										
	- 084										
	- 085										
	- 086										
	- 087										
	- 088										
	- 089										
	- 090										
	- 091										

^{*} a wider range of executions is available on request.

Nominal					Filter
size	Order		Filter	max. ∆ p	surface
NG [l/min]	number	Туре	material	[bar]	[cm²]
	77925001	Pi 13004 RN Mic 10 NBR	Mic 10		820
	77962210	Pi 15004 RN Mic 25 NBR	Mic 25		820
	77923998	Pi 21004 RN Sm-x 3 NBR	Sm-x 3		820
40	77964033	Pi 22004 RN Sm-x 6 NBR	Sm-x 6	10	820
	77924004	Pi 23004 RN Sm-x 10 NBR	Sm-x 10		820
	77962244	Pi 24004 RN Sm-x 16 NBR	Sm-x 16		820
	77960206	Pi 25004 RN Sm-x 25 NBR	Sm-x 25	1	820
	77925019	Pi 13006 RN Mic 10 NBR	Mic 10		1 445
	77962228	Pi 15006 RN Mic 25 NBR	Mic 25		1 445
	77924012	Pi 21006 RN Sm-x 3 NBR	Sm-x 3		1 445
63	77964042	Pi 22006 RN Sm-x 6 NBR	Sm-x 6	10	1 445
	77924020	Pi 23006 RN Sm-x 10 NBR	Sm-x 10		1 445
	77962251	Pi 24006 RN Sm-x 16 NBR	Sm-x 16		1 445
	77960214	Pi 25006 RN Sm-x 25 NBR	Sm-x 25		1 445
	77925027	Pi 13010 RN Mic 10 NBR	Mic 10		2 380
	77962236	Pi 15010 RN Mic 10 NBR	Mic 25		2 380
	77924038	Pi 21010 RN Sm-x 3 NBR	Sm-x 3		2 380
100	77940844	Pi 22010 RN Sm-x 6 NBR	Sm-x 6	10	2 380
	77924046	Pi 23010 RN Sm-x 10 NBR	Sm-x 10		2 380
	77962269	Pi 24010 RN Sm-x 16 NBR	Sm-x 16		2 380
	77960222	Pi 25010 RN Sm-x 25 NBR	Sm-x 25		2 380

^{*} a wider range of element types is available on request

8. Technical specifications

Design: tank top mounting filter

Nominal pressure: 10 bar (140 psi)

Test pressure: 13 bar (180 psi)

Temperature range: -10 °C to +80 °C

(other temperature ranges on request)

Bypass setting: 3.5 bar ± 10%
Filter head material: GD Al
Filter housing material: plastic
Sealing material: plastic

Maintenance indicator setting 2.2 bar ± 10 %

PiS 3084/85:

Electrical data of maintenance indicator:

Max. voltage: 250 V AC/200 V DC

Max. current: 1 A

Contact load: 70 W

Type of protection: IP 65 in inserted and

secured status

Contact: normally open/closed
Cable sleave: M20x1.5

The switching function can be changed by turning the electric upper part by 180° (normally closed contact or normally open contact). The state on delivery is a normally closed contact. By inductivity in the direct current circuit the use of suitable protection circuit should be considered. Further maintenance indicator details and designs are available in the maintenance indicator data sheet.

We draw attention to the fact that all values indicated are average values which do not always occur in specific cases of application. Our products are continually being further developed. Values, dimensions and weights can change as a result of this. Our specialized department will be pleased to offer you advice.

With the inrush current of 70 VA the indicator can trigger small contactors or contactor relays.

Inductivity in the direct current may require the use of a signal suppressor.


Recommended max. flow rate of the filling unit at viscosity of 500 mm²/s and a degree of filtration 3 μ m: NG 40 = 8 I /min, NG 63 = 15 I /min, NG 100 = 25 I /min.

9. Dimensions

All dimensions except "D" in mm.

_		_			E	_	Weight
Type	Α	В	С	D*	DIN 2999	F	[kg]
Pi 50004	208	159	131	G1	G1	100	0.65
Pi 50006	268	219	191	G1	G1	130	0.68
Pi 50010	358	309	281	G1	G1	200	0.74

*NPT- and SAE- connections on request

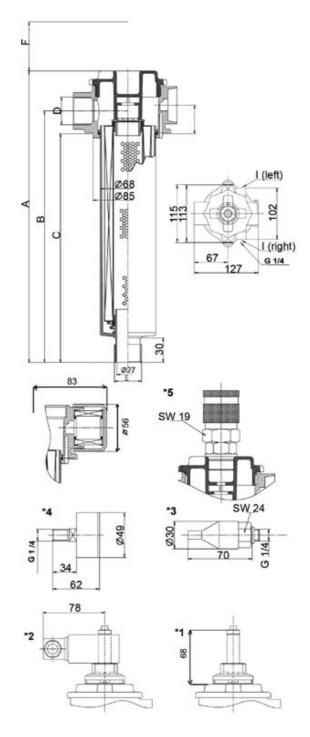

1 = Standard maintenance indicator visual PiS 3084

1 + 2 = Standard maintenance indicator electrical PiS 3085

3 = Pressure switch

4 = Pressure gauge 0 to 6 bar

5 = Quick release coupling for filing

10. Installation, operating and maintenance instructions

10.1 Filter installation

When installing the filter make sure that:

- a) that sufficient space is available to remove filter element and filter housing.
- b) the mounting hole in the tank top is not excessively large, to ensure proper sealing,
- c) the filter is free of tension after installation

Preferably the filter should be installed with the filter housing pointing downwards. In this position the visual pressure indicator is accessible and visible.

10.2 Connecting the electrical pressure indicator

The electrical pressure indicator is connected via a 2-pole appliance plug according to DIN EN 17 5301-803 with poles marked 1 and 2. The electrical section can be inverted to change from normally open position to normally closed position or vice versa.

10.3 When must the filter element be replaced?

- Filters equipped with visual and/or electrical pressure indicator:
 During cold starts, the indicator may give a warning signal.

 Press the button of the visual indicator once again only after operating temperature has been reached. If the red button immediately pops up again and/or the electrical signal has not switched off after reaching operating temperature, the filter element must be replaced after the end of the shift.
- 2 . Filters without pressure indicator:

 The filter element should be replaced after trial run or flushing of the system. Afterward follow instructions of the manufacturer.
- 3 . Please always ensure that you have original MAHLE spare elements in stock: Disposable elements (Sm-x) cannot be cleaned.


10.4 Element replacement

- 1. Stop system and relieve filter from pressure.
- 2. Unscrew cover, turning counter-clockwise.
- 3. Remove filter housing and filter element by pulling upwards.
- 4. Remove filter element with a side-to-side motion.
- 5. Clean the housing using a suitable cleaning solvent.
- Check O-ring on filter cover and filter housing for damage. Replace, if necessary.
- 7 . Make sure that the order number on the spare element corresponds to the order number of the filter name-plate.
- 8 . Remove filter element from the plastic bag and reassemble filter in reverse order (items 1 to 6).

Subject to technical alteration without prior notice.

11. Spare parts list

 FPM 77999725 EPDM 77999741 With air breather NBR 77999717 FPM 77999733 EPDM 77999758 Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692 	Order number for spare parts									
Seal kit for housing	Pos.	Туре								
Without air breather 77999709 NBR 77999709 FPM 77999725 EPDM 77999741 With air breather NBR 77999717 FPM 77999733 EPDM 77999758 Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760234 EPDM 77760234 Thread connection for filling 77965130 Quick release coupling 77927643 Air breather element Paper 852 514 Mic 77687692		Pi 50004-50010								
NBR 77999709 FPM 77999725 EPDM 77999741 With air breather NBR 77999717 FPM 77999733 EPDM 77999758 Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		Seal kit for housing								
 FPM 77999725 EPDM 77999741 With air breather NBR 77999717 FPM 77999733 EPDM 77999758 Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692 		Without air breather								
- EPDM 77999741 With air breather NBR 77999717 FPM 77999733 EPDM 77999758 Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760234 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		NBR	77999709							
With air breather NBR 77999717 FPM 77999733 EPDM 77999758 Maintenance indicator 77737802 Visual PiS 3084/ 2.2 bar 77738032 Electrical PiS 3085/ 2.2 bar 77738032 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77927643 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692	1	FPM	77999725							
NBR	-	EPDM	77999741							
FPM 77999733 EPDM 77999758 Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692	3	With air breather								
EPDM 77999758 Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		NBR	77999717							
Maintenance indicator Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77927643 Air breather element Paper 852 514 Mic 77687692		FPM	77999733							
Visual PiS 3084/ 2.2 bar 77737802 Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		EPDM	77999758							
Electrical PiS 3085/ 2.2 bar 77738032 Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77927643 Air breather element Paper 852 514 Mic 77687692		Maintenance indicator								
④ Electrical upper section only 77536550 Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR FPM 77760218 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77927643 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		Visual PiS 3084/ 2.2 bar	77737802							
Pressure Gauge 78381998 Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR FPM 77760218 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		Electrical PiS 3085/ 2.2 bar	77738032							
Pressure switch normally closed 77845845 Pressure switch normally open 77870595 Seal kit for maintenance indicator 77760218 NBR 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692	4	Electrical upper section only	77536550							
Pressure switch normally open 77870595 Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		Pressure Gauge	78381998							
Seal kit for maintenance indicator NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		Pressure switch normally closed	77845845							
NBR 77760218 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		Pressure switch normally open	77870595							
 FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692 		Seal kit for maintenance indicator								
FPM 77760226 EPDM 77760234 Thread connection for filling 77969017 Quick release coupling 77965130 Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692		NBR	77760218							
(a) Thread connection for filling 77969017 Quick release coupling 77965130 (b) Anti spillage sleeve 77927643 Air breather element 77687692	(5)	FPM	77760226							
@ Quick release coupling 77965130 ① Anti spillage sleeve 77927643 Air breather element 8 Paper 852 514 Mic 77687692		EPDM	77760234							
Quick release coupling 77965130 O Anti spillage sleeve 77927643 Air breather element Paper 852 514 Mic 77687692	6	Thread connection for filling	77969017							
Air breather element Paper 852 514 Mic 77687692	6	Quick release coupling	77965130							
8 Paper 852 514 Mic 77687692	7	Anti spillage sleeve	77927643							
•		Air breather element								
Glas fibre 852 514 Sm-L 77643562	8	Paper 852 514 Mic	77687692							
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		Glas fibre 852 514 Sm-L	77643562							

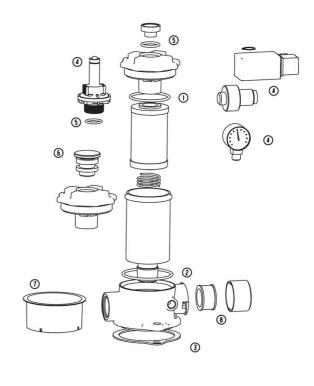

MAHLE Filtersysteme GmbH Industriefiltration Schleifbachweg 45 D-74613 Öhringen Phone +49 (0) 7941/67-0 Fax +49 (0) 7941/67-23429 industriefiltration@mahle.com www.mahle-industrialfiltration.com 70363176.03/2008